



ANTI THEFT

NEMESIS

High Security Wheel Clamp



**PLEASE READ THIS
MANUAL BEFORE FIRST
USE. TIME INVESTED IN
CORRECT FITMENT IS
REPAID IN THE LEVEL
OF SECURITY THAT IS
ACHIEVED.**

User Manual


Product Code: FPC300

 **purpleline**[®]
design...innovate...improve






NEMESIS WHEEL CLAMP COMPONENT IDENTIFICATION

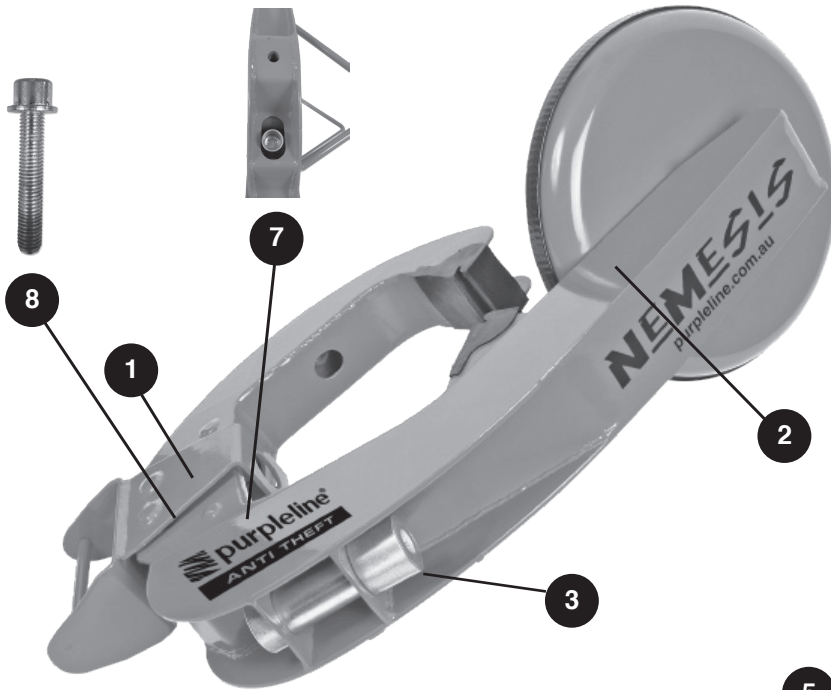

- 1. JAWS
- 2. WHEEL HUB ARM AND SHIELD
- 3. LOCKING PIN (TWO-PART)
- 4. HEX TOOL
- 5. RUBBER DUST CAP
- 6. KEYS
- 7. WHEEL HUB ARM HEX BOLT
- 8. ADJUSTER BOLT

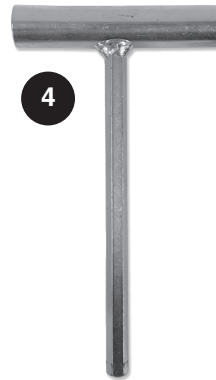

5



4



6

 **purpleline**[®]
design...innovate...improve





NEMESIS WHEEL CLAMP USAGE

The **Nemesis Anti Theft Wheel Clamp** is designed to fit around and lock onto the wheel to prevent the vehicle being driven away. It is engineered to fit most steel and alloy wheels from 10" to 20" and tyres from 145mm to 275mm in width, on and off road wheel and tyre combinations.

The **Nemesis Anti Theft Wheel Clamp** is made from specially hardened high strength steel which is resistant to cutting and drilling.

For added security the **Nemesis Anti Theft Wheel Clamp** incorporates a high security, 7-lever barrel lock, resistant to picking, drilling and gas freezing.

NEMESIS WHEEL CLAMP MAINTENANCE

On a regular basis apply either a clear silicone lubricant or petroleum jelly to the lock to aid lubrication and functionality of the lock.

NEMESIS WHEEL CLAMP - QUICK 6 STEP FITMENT



1. Open



2. Position



3. Close



4. Cover



5. Tighten



6. Lock

 **purpleline**[®]
design...innovate...improve





NEMESIS WHEEL CLAMP USER INSTRUCTIONS

FITMENT:

- Insert the Hex Tool into the Adjuster Bolt and turn the Hex Tool anticlockwise to open the jaws (Image A).
- Check that the Jaws are wide enough to fit around the tyre (Image B) and fit onto the wheel (Image C).

Position the tips of the jaws into the wheel as far as possible (Image D).

NOTE: When fitting to alloy or composite wheels it may be prudent to use some form of padding on the inside of the jaws to protect the wheel from being scratched.

- Insert the Hex tool into the Adjuster Bolt and turn the Hex Tool clockwise to close the Jaws around the wheel (Image E) until the Adjuster Bolt is tight.



 **purpleline**[®]
design...innovate...improve








- If necessary, unscrew the Wheel Hub Arm Hex Bolt by turning it anticlockwise to enable the Wheel Hub Arm and Shield to be mounted (Image F).
- The Wheel Hub Arm and Shield incorporates a 'Key hole' (Image G - 1a), that is designed to slot in and slide under the head of the Wheel Hub Arm Hex Bolt (Images H and I).
- Place the Wheel Hub Arm and Shield over the Wheel Hub Arm Hex Bolt (Image H) so the Wheel Hub Arm Hex Bolt protrudes through the key hole in the Wheel Hub Arm and Shield, and move the Wheel Hub Arm and Shield until it is in contact with the Jaws.

NOTE: With certain wheel and tyre combinations it may be easier to remove the Wheel Hub Arm Hex Bolt and reattach after mating the Wheel Hub Arm and Shield.

- Slide the Wheel Hub Arm and shield into the slot of the key hole (Image I).

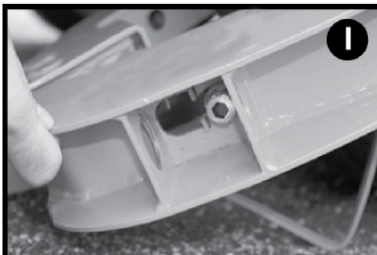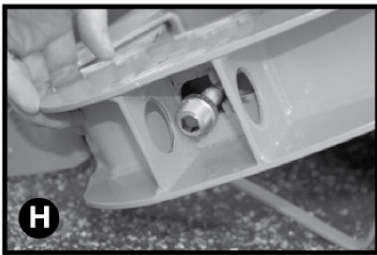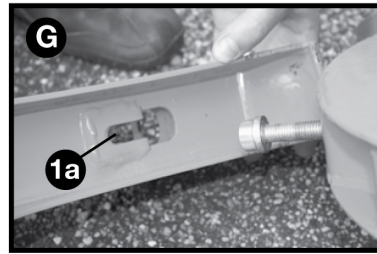

 **purpleline**[®]
design...innovate...improve





NEMESIS WHEEL CLAMP USER INSTRUCTIONS



- Hold the Wheel Hub Arm and Shield in position (Image J). The Shield has a slide and tilt mechanism and should be adjusted to centralise it with the face of the wheel as much as possible.

NOTE: On larger wheels this may not be possible, in which case ensure at least one wheel nut is fully covered.

- Once in position, use the Hex Tool to tighten the Wheel Hub Arm Hex Bolt (Image K).
- Insert the Large Locking Pin through the holes in the arm of the Wheel Hub Arm and Shield and insert the key-lock section into the pin by rotating it and pushing it down until it slots into place (Image L).

NOTE: There is a nodule on the key-lock designed to align with a notch located on the inside of the pin. For extra security have the lock facing downwards.

- Turn the Key 90 degrees anticlockwise and remove.
- The **Nemesis Security Wheel Clamp** is now secure (Image M).

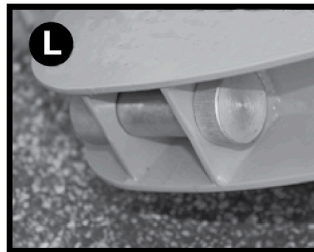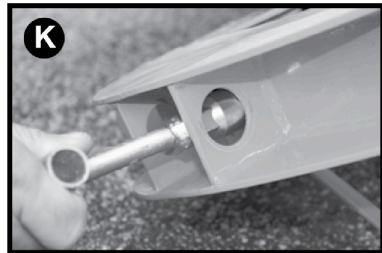

 **purpleline**[®]
design...innovate...improve





NEMESIS WHEEL CLAMP - DISCLAIMER

When the **Nemesis Anti Theft Wheel Clamp** is fitted correctly it is an effective deterrent to prevent the theft of a vehicle. However, as with all products designed to prevent theft, they will not prevent a determined or professional thief from stealing a vehicle.

Additionally the **Nemesis Anti Theft Wheel Clamp** is not designed for use as a wheel chock or for any other purpose than stated.

Accordingly, Purple Line Pty Ltd will not accept liability for any loss or damage which may result from an attempted or realised theft. Additionally, no liability will be accepted from the improper fitment, use or misuse, maintenance and unauthorised modification or repair of the **Nemesis Anti Theft Wheel Clamp** and any consequential loss that may result.

Photographs used are for illustration purposes only and may differ for the product. Purple Line reserves the right to alter product specifications without prior notice.


NEMESIS WHEEL CLAMP - WARRANTY POLICY

The **Nemesis Anti Theft Wheel Clamp** is guaranteed for 2 Years from date of purchase and subject to Australian Consumer Law. Purple Line warrants the **Nemesis Anti Theft Wheel Clamp** is supplied free of defects.

- Refund:** The Goods will be refunded if not fit for purpose.
- Replacement:** The Goods will be replaced if defects were apparent upon purchase or a major failure occurs, which cannot be repaired.
- Repair:** The Goods will be repaired in the event of failure. Goods presented for repair may be repaired or replaced by refurbished goods or parts of a similar type.
- Contacts:** To make a warranty claim first contact the retailer.

To activate your warranty please go to: www.purpleline.com.au and register the product online.



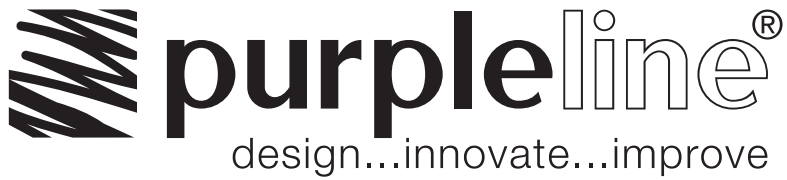

Purple Line Pty Ltd
12 Capital Court
Braeside VIC 3195

T: +61 (3) 9588 2959
E: enquiries@purpleline.com.au
W: www.purpleline.com.au

